

FASEL GmbH

Brief instruction for the operation of the internal display FCU-EXT-DISPLAY-TOUCH

Some menus are available only if the corresponding bathing options or other options are available.

Keys	Display	Info
	20.00	LED does not glow: you are in the standard display menu of the actual values, here e.g. time
		The LED  glows: As long as this LED glows you are in the menu for changing the nominal values. After some seconds without operating the key board, the program automatically returns to main screen and the LED  goes out.
	50°	The LED  glows Display of the nominal temperature
	50°	The LED  blinks With the keys  and  you can set the desired temperature. To store the values press the key 
	50r.H. F 5	The LED  glows If there is a humidity sensor then the nominal humidity is displayed e.g. 50r.H. or e.g. F 5 if there is no humidity sensor (Interval humidity).
	50r.H. F 5	The LED  blinks With the keys  and  you can select the desired humidity. To store the values press the key 
	06.00	The LED  glows The heating duration is displayed
	06.00	The LED  blinks With the keys  and  you can set the desired duration of heating. To store the value press the key 
	OFF	The LED  glows Display for light ON/OFF or the dimmer level
	L 1 1 ... L 1 9	The LED  blinks With the keys  and  you can switch ON or switch OFF the light or set the brightness. To store the value of the brightness press the key 
	OFF	The LED  glows Display for the blower ON/OFF or the blower level

Keys	Display	Info
↵	FR 1 ... FR 9	The LED ✕ blinks With the keys ▲ and ▼ you can switch ON or switch OFF the blower or set the blower RPM. To store the blower stage press the key ↵
▼	CoLo	The LED ⦿ glows Display of the coloured light mode
↵	AUtO	The LED ⦿ blinks With the keys ▲ and ▼ you can set the coloured light mode. To store the coloured light mode, press the key ↵ Here coloured light automatic mode
▲	L 1	Manual operation: Lamp 1 = ON, all others = OFF
▲	L 1 L 2	Manual operation: Lamp 1+ 2 = ON, all others = OFF
▲	L 2	Manual operation: Lamp 2 = ON, all others = OFF
	...	etc.
▲	L 4	Manual operation: Lamp 4 = ON, all others = OFF
▲	OFF	Switch off the coloured light
▲	AUtO	See above
▼	↵ StOP StAr	The LED S blinks If a bathing option is active, then STOP appears, you can then end the bathing option. If no bathing option is active then START appears. Depending on the type of control device you are using, you can select the desired bathing option with the keys ▲ and ▼
▲	SAUn	Start the bathing option Sauna with the key ↵
▲	HUM 1	Start the bathing option Sauna with humidity with the key ↵
▲	Ir	Start the bathing option Infrared with the key ↵

Keys	Display	Info
Hand-held transmitter for internal display		
	<p>A remote control (2-FCU-HANDESENDER-A, similar to figure) is available for the internal display FCU-EXT-DISPLAY-TOUCH.</p> <p>The internal display (Internal adjustment) can be operated through the keys of the hand held transmitter or directly at the internal display itself. The keys are identical in their function.</p> <p>When <i>bAtt</i> appears on the display, then the battery of the hand held transmitter is too weak or almost empty.</p>	
	<p style="text-align: center; font-size: 24px;">2.0.00</p>	<p>Report new hand held transmitter to the internal display:</p> <p>Press the keys on the internal display (not on the hand held transmitter), depicted on the left, simultaneously. In the display on the left position (here after 2) a point appears. Now you must press any key on the hand held transmitter till the point on the left position does not glow any more. Now the hand held transmitter is fully functional on the internal display .</p>