
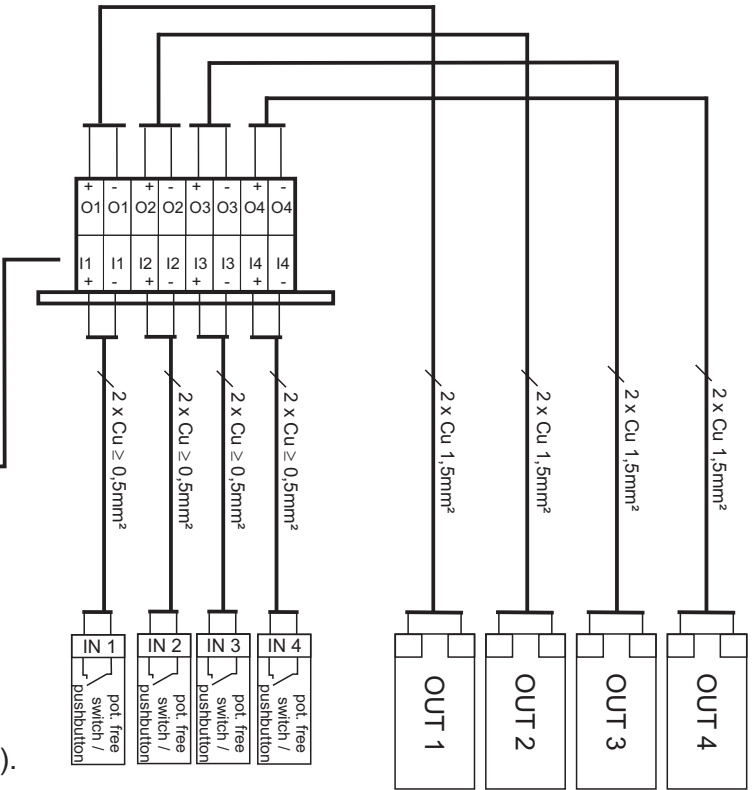


Technical Data

Potential free inputs	
Contact supply	Internal approximately 12.....16V
max. switching current	Approximately 10 mA

Potential free outputs	
max. voltage	50V= (safety extra-low voltage)
max. switching current	0,2 A

For the connection of the cables it is recommended to use rigid wires, e. g. bell wires!

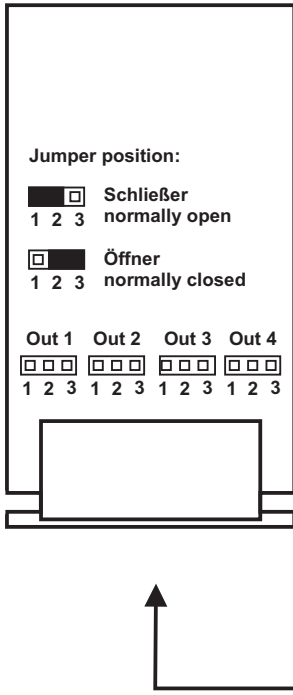

Option outputs for customer specific applications

Attention:
 All connections to the optional in- and outputs must have a safe separation between mains and SELV (Safety extra-low-voltage).
Danger of life !

Function depending on the program no., see enclosure Option programs.
 Place of installation of the options board see installation instructions page 3.

Connection diagram option board Potential free FCU-EXT-POTFREI-4xIN-4xOUT

Prepared: Kanzinger 16.03.2010	Modified: Kanzinger 17.12.2018	Checked:	File: I:\Doku\Fasel\FCU-EXT \Potfrei-4x_8x\Modul\ Potfrei.cdr An_Potfrei-4xIN-4xOUT_EN.pdf	Technical changes and errors excepted, illustration similar
--------------------------------------	--------------------------------------	----------	--	---

